


# DELLA®

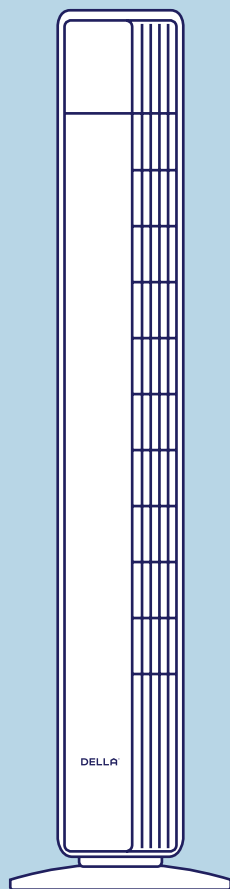

## Tower Fan

Instruction Manual  
Installation and Operation Guide

---





# Table of Content

04

---

Warning and Safety

06

---

Name of Parts  
Product Specification

07

---

Assembly Instruction

08

---

Power Connection

10

---

Control Panel  
Remote Control

13

---

Operation Instruction

16

---

Care and Maintenance

19

---

Troubleshooting

20

---

Warranty

## Warning and Safety

- Read this guide before installation. Failure to follow the safety instructions may result in property damage, serious injury, or death.
- Please Keep this manual.



### Danger:

Indicates an **IMMINENTLY** hazardous situation that, if not avoided, will result in death, serious injury, or serious property damage.



### Warning:

Indicates an **POTENTIALLY** hazardous situation that, if not avoided, will result in death, serious injury, or serious property damage.



### Caution:

Indicates an **POTENTIALLY** hazardous situation that, if not avoided, will result in minor to moderate injury. It may also be used to indicate unsafe practice.



### Attention:

Pay additional attention to the instruction.



### DO NOT:

Indicates prohibited actions and/or practice.

## About Installation



- Do not install or use this appliance in the bathroom, laundry area, or places that might come into contact with water.
- Do not alter, change, or modify the appliance.



- The base must be properly assembled before using the tower fan.

## About Power and Electricity



- Do not operate the tower fan with a damaged cord or plug.
- Do not bend, tug, or compress the power cord to prevent damaging the cord. Damaged cord should be replaced by a qualified electrician.



- Do not run the power cord under any carpeting nor covering it with throw rug or pillows.
- Do not use the tower fan with any solid-state speed control device.



- Ensure that the power voltage corresponds to that stamped on the rating plate.
- Always disconnect the tower fan from power supply when leaving it unused for a long time or before cleaning.
- Arrange the power cord away from high traffic area to prevent tripping over.




# Warning and Safety

| About Operation                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><br/>WARNING</div> <div></div> | <ul style="list-style-type: none"><li>Do not disconnect the tower fan from power supply before shutting off the fan. This might create a spark and potentially cause a fire.</li><li>Do not climb onto or place object on the tower fan.</li><li>Do not insert your fingers or any objects into the power fan.</li><li>Do not obstruct the air inlet and outlet.</li><li>Do not operate the tower fan with wet hands.</li><li>Do not operate the tower fan near flammables and combustibles.</li></ul> |
| <div><br/>CAUTION</div> <div></div> | <ul style="list-style-type: none"><li>Only operate / use the tower fan as instructed in this booklet. These instruction are not intended to cover every possible condition and situation. As with any household appliance, common sense and caution are therefore always recommended for usage and maintenance.</li></ul>                                                                                                                                                                              |

| Encountering Troubles                                                                                    |                                                                                                                                                                                                                                                                       |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><br/>WARNING</div> | <ul style="list-style-type: none"><li>In the case of the tower fan emitting smoke, burning smell, or making unusual noise, shut down the fan and disconnect it from the power supply immediately. Contact a qualified technician for inspection and repair.</li></ul> |

| About Handling and Maintenance                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><br/>WARNING</div> <div></div> | <ul style="list-style-type: none"><li>Do not flush the tower fan with water.</li><li>Do not use replacement parts that have not been recommended by the manufacturer, including homemade, 3D printed or other aftermarket parts.</li></ul>                                                                                                |
| <div><br/>WARNING</div>                                                                                              | <ul style="list-style-type: none"><li>Repairs should be carried out by a professional or qualified technician only. Incorrect repair could expose the user to potential electric shock or other kinds of hazard.</li><li>Before cleaning the fan, it must be shut down and disconnect from power supply for at least 5 minutes.</li></ul> |

Name of Parts

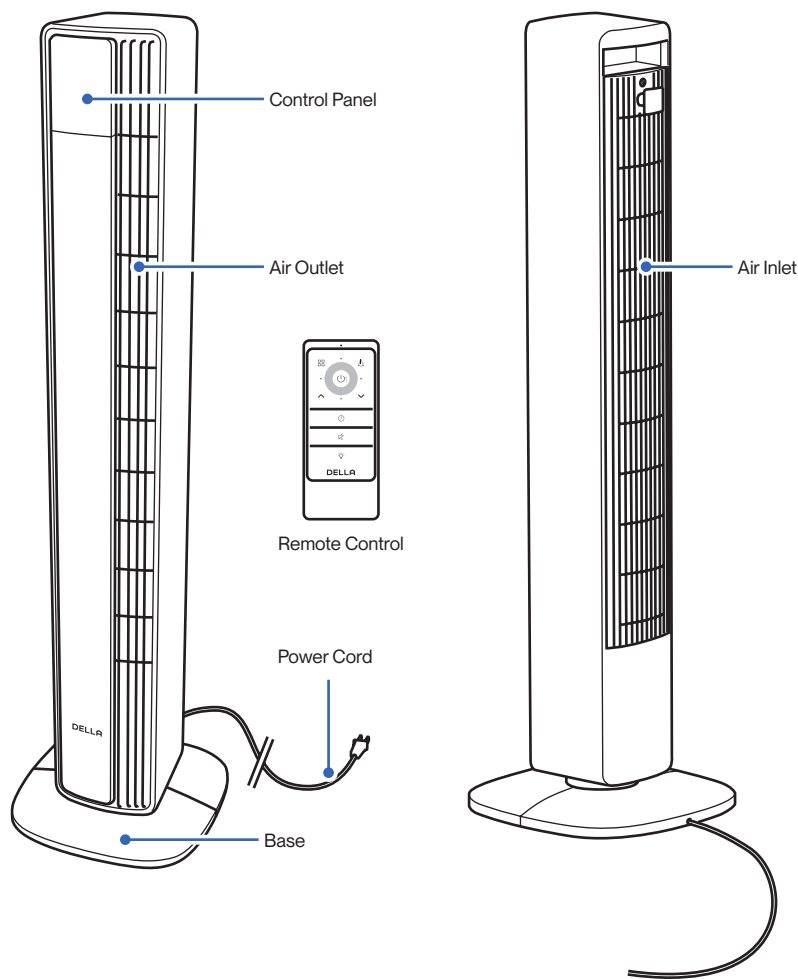


Product Specification

|                    | TF01          |
|--------------------|---------------|
| Power Supply Input | 120 V / 60 Hz |
| Rated Power        | 45 W          |

# Assembly Instruction


## Assemble the Base

1

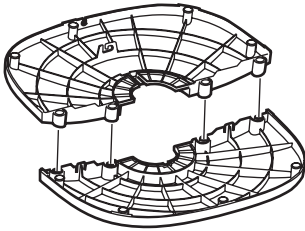


- Align and assemble the base plates.

2

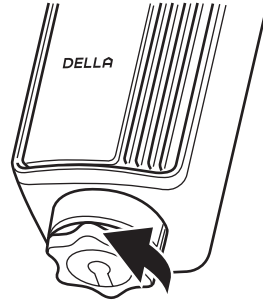


- Unscrew the retainer cap from the bottom of the fan.

3

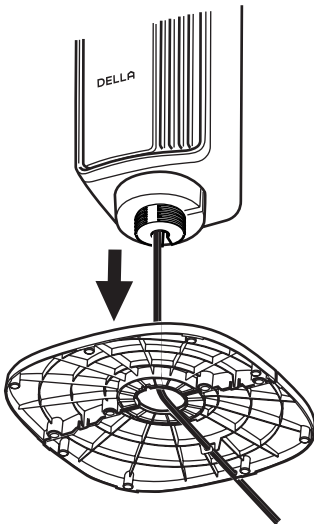

- Arrange the power cord through the center opening and clip underneath the base.

4

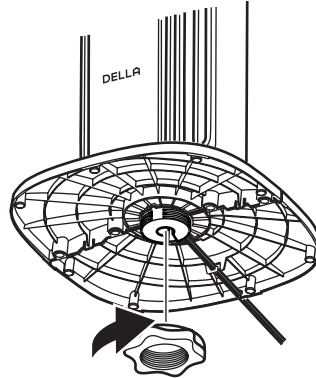

- Screw the retainer cap back to the tower fan.




- Do not pinch the power cord between the base and the retainer cap.

## Assembly Instruction

### Power Connection


1. Insert the power plug into a wall power socket.

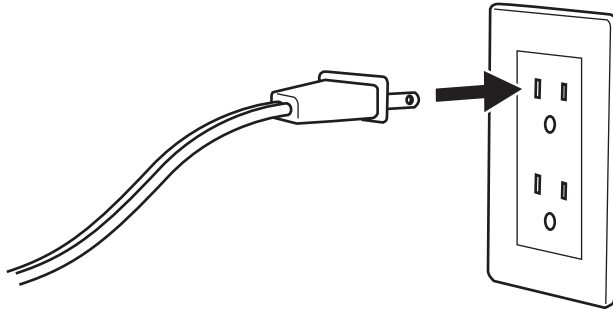

### About Fused Safety Plug


This tower fan is equipped with a fused safety plug to protect against overload. In the case of an overload, the fuse wire would melt and disconnect power to the tower fan. A triggered fuse must be replaced before using the tower fan again.

1. Unplug the power plug from power supply.
2. Slide open the fuse over.
3. Remove the old fuse.
4. Insert a new 5 amp 125 volt fuse.
5. Close the cover and reconnect the power plug to power supply.

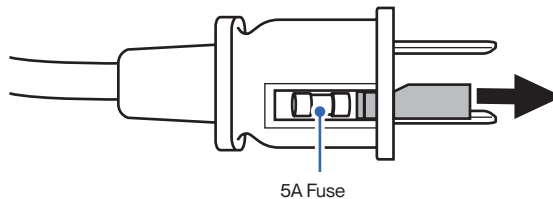

## Before Using

### Operation Tips


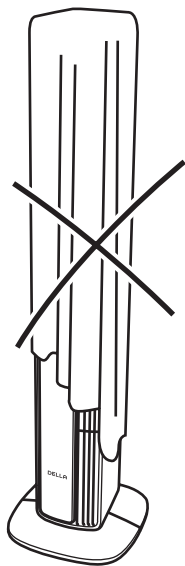


DO NOT obstruct the air inlet and outlet while the tower fan is in operation.



DO NOT use the tower fan near flammables and combustibles.

Control Panel / Remote Control

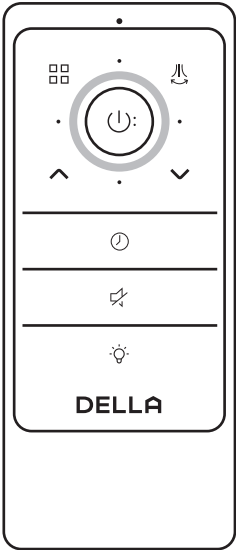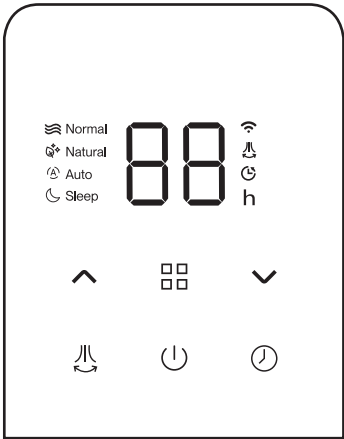

**Increase Button**

Increase fan speed (12 levels)



**Mode Button**

Select between normal, natural, auto, and sleep mode



**Decrease Button**

Decrease fan speed (12 levels)



**Oscillate Button**

Control the fan to oscillate



**Power Button**

Power ON / OFF the tower fan



**Timer Button**

Enable ON / OFF timer setting



**Mute Button**

Mute / Unmute the fan

\*Only available on remote control



**Display Button**

Turn ON / OFF the fan display

\*Only available on remote control

# Remote Control

## Remote Control (Using for the first time)



1. The remote control comes with a pre-installed battery.
2. Before using the remote control for the first time, pull and remove the insulating strip from the remote control

## Remote Control (Replace Battery)

1. Hold the remote control with buttons facing downwards.
2. Remove the battery tray from the remote control by pulling the tray while pushing in the locking tab.
3. Place a CR2025 coin battery into the battery compartment according to the correct polarity.
4. Reinstall the battery tray into the remote control.



- Positive pole of the battery should be facing upward on the battery tray.

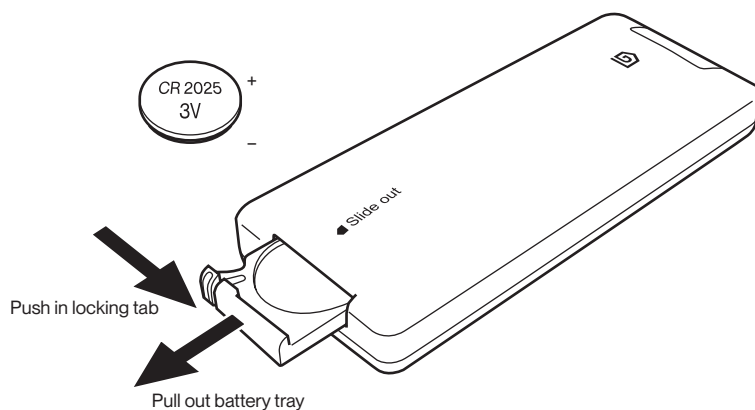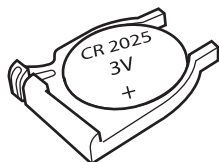

## Remote Control

### Coil Cell Battery Safety Warning

| <b>⚠ WARNING</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>• <b>INGESTION HAZARD:</b> This product contains a button cell or coin battery.</li><li>• <b>DEATH</b> or serious injury can occur if ingested.</li><li>• A swallowed button cell or coin battery can cause <b>Internal Chemical Burns</b> in as little as <b>2 hours</b>.</li><li>• <b>KEEP</b> new and used batteries <b>OUT OF REACH of CHILDREN</b></li><li>• <b>Seek immediate medical attention</b> if a battery is suspected to be swallowed or inserted inside any part of the body.</li></ul> |  |

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Compatible battery type: CR2025, Voltage: 3V.
- e) Non-rechargeable batteries are not to be recharged.
- f) Do not force discharge, recharge, disassemble, heat above manufacturer's specified temperature rating or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- g) Ensure the batteries are installed correctly according to polarity (+ and -).
- h) Do not mix old and new batteries, different brands, or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- i) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- j) Always completely secure the battery compartment. If the battery compartment does not close securely stop using the product, remove the batteries, and keep them away from children.
- k) Do not ingest battery, Chemical Burn Hazard.
- l) This product contains a coin or button cell battery. If the coin or button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- m) Keep new and used batteries away from children. If the battery does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

# Operation Instruction

## Basic Operation

Press  to turn on the tower fan.

Press  and  to adjust fan speed. There are 12 levels of fan speed.

Press  to oscillate the tower fan and change airflow direction.

## Operation Mode

Press  to select operation mode.



### Normal Mode

Tower fan operates at a fixed fan speed.



### Natural Mode

Tower fan operate in alternating fan speed, mimicking natural wind.



### Auto Mode

Tower fan automatically adjust fan speed according to its detected ambient temperature.



### Sleep Mode

Tower fan automatically decrease fan speed every 30 mins. The tower fan will also automatically turn on mute function.

## Timer Function (Shutdown Timer)

Set a timer to automatically turn OFF the tower fan.

Press  when the tower fan is ON.

Continue pressing  to set the desired turn off time between 0 - 24 hours.

Leave the setting for 10 seconds to confirm the setting.

Press  again and set timer to 0 to cancel the timer setting.

## Timer Function (Startup Timer)

Set a timer to automatically turn ON the tower fan.

Press  when the tower fan is OFF.

Continue pressing  to set the desired turn off time between 0 - 24 hours.

Leave the setting for 10 seconds to confirm the setting.

Press  again and set timer to 0 to cancel the timer setting.

## Operation Instruction

### Display ON / OFF

The tower fan display will automatically turn off after not touching for 30 seconds.

In sleep mode, the display will automatically turn off after not touching for 5 seconds.

Press  on the remote control once to force the display to be ON, press  again to force the display to be off.

### Mute Function

Press  on the remote control once to mute the buzzer.

Press  on the remote control again to unmute the buzzer.

Alternatively, press and hold  on the control panel for 3 seconds to mute / unmute the buzzer.

### Child Lock

Child lock function will disable all input from the control panel until unlocked.

Press and hold  and  for 3 seconds to activate child lock.

"LC" will be displayed on the display.

Press and hold  and  for 3 seconds again to deactivate child lock.

### Temperature Display

Temperature display function allows the tower fan to show your room temperature on the control panel display.

Press and hold  and  simultaneously for 3 seconds to activate temperature display.

Press and hold  and  simultaneously for 3 seconds again to deactivate temperature display.

### Wi-Fi Reset

Wi-Fi reset function allows you to clear all existing app pairing and pair the tower fan to your mobile device's app again.

Press and hold  for 5 seconds to enable Wi-Fi reset.

NOTE: Wi-Fi function is only available for TF01S model.

### Factory Reset

When the tower fan is ON

Press and hold  for 3 seconds to reset the tower fan to factory default setting.

# Operation Instruction

## Wi-Fi Set Up (Only available for TF01S)

Other than the control panel and remote control, you can control your tower fan via Della+ app.

1. Search "Della+" on Apple app store or Google Play, or scan the QR code below to download the application.
2. Register an account in the app.
3. Follow the in-app instructions to add and pair your Della tower fan to the app and complete the Wi-Fi set up.



### Device QR code

Scan this QR code to add device to your Della+ app.



- The Della+ application is free, however, data charges may apply when downloading or using the application.
- Della+ can be altered without notice for quality improvement and also be deleted depending on the circumstances of manufacturing firms.
- All trademarks, logo, brand names are the property of their respective companies. Use of these names, brands, and trademarks does not imply endorsement. Della assumes no responsibility with regard to the performance or use of these products.




- Check out detailed tutorial on the most updated application on [dellahome.com/support](http://dellahome.com/support)

## Care and Maintenance



- Before cleaning the tower fan, you must shut down the unit and disconnect it from the power supply for at least 5 minutes.
- Never flush the tower fan with water.


### Cleaning the Unit

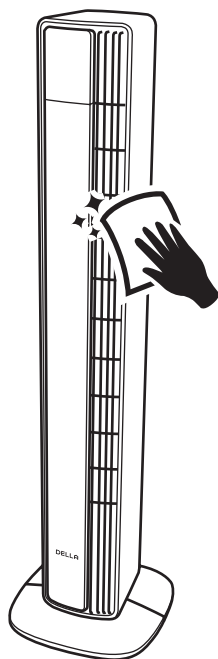


- Clean the tower fan with a soft dry cloth or a dampened cloth with neutral detergent.
- Remove dust and debris on the air inlet and outlet.

# Care and Maintenance


## Cleaning the Fan Blade

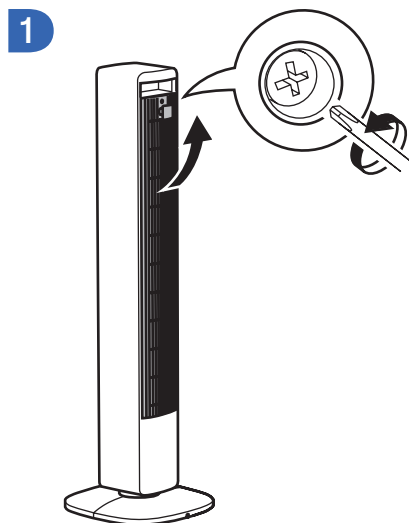


- Remove the screw holding the vent, then pull up and out the air inlet vent from the tower fan.

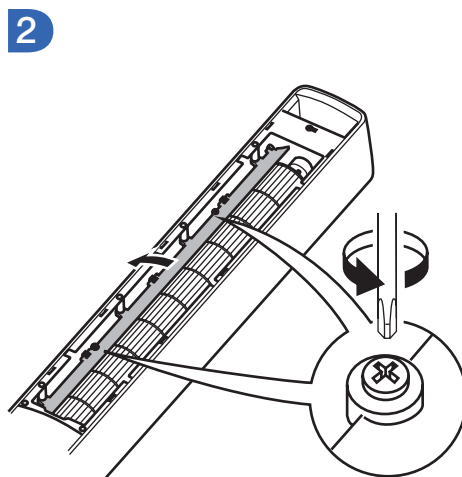

- Flip the air deflector to the left inside of tower fan by loosening the screws.

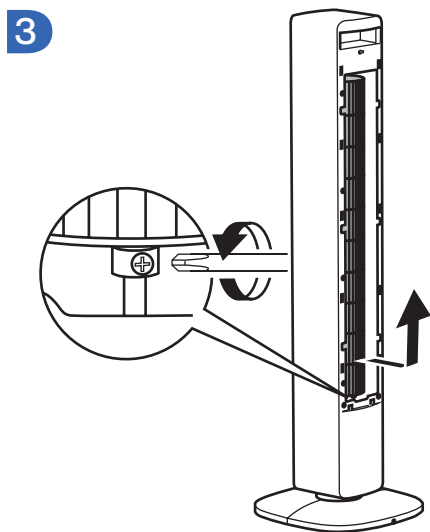

- Remove the fan blade from the tower fan.

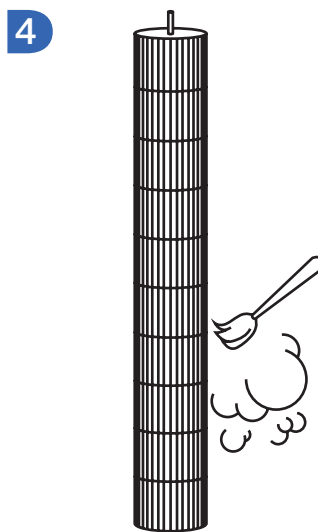

- Brush off dust or debris from the fan blade.

## Care and Maintenance

### Maintenance Routine

- Regularly check and remove any obstacles from the air inlet and outlet.

### Planning to Not Operate the Tower Fan for a Long Period

- Disconnect the power supply of the tower fan.
- Clean the fan tower.
- Store the tower fan in a dry indoor location.

### Using the Tower Fan after a Long Idle Period

- Clean the fan tower.
- Remove any obstacles from the air inlet and outlet.
- Connect the tower fan to power supply and start using.

# Troubleshooting

Before consulting repair or warranty, please check the following troubleshooting guide.  
In the case of an persistent problem, contact a qualified technician for diagnosis and repair.



- When encountering presisting problem, stop operation and disconnect the tower fan from power supply.
- Do not attempt to repair or modify the fan by yourslef. Incorrect work may result in electric shock, or injury.

| Problem                                                    | Possible Cause / Explanation / Solution                                                                             |
|------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| The tower fan is non operational                           | The power cord is not plugged to an electric outlet.                                                                |
|                                                            | Faulty electric connection, mismatch outlet voltage, or damaged electronic control board.                           |
|                                                            | The fan is placed on uneven ground and internal protection system activated. Place the fan on flat and even ground. |
|                                                            | Burnt fuse on the power plug, Replace with a new fuse.                                                              |
| Tower fan is shaky and making eccessive noise              | The fan blade is too dirty. Clean the fan blade.                                                                    |
|                                                            | The base is not assembled securely.                                                                                 |
| The tower fan is not responding to control panel commands  | The control panel with child lock enabled.                                                                          |
| The tower fan is not responding to remote control commands | Remote control is too far away from the tower fan.                                                                  |
|                                                            | There is an obstruction between the remote control and tower fan.                                                   |
|                                                            | The battery power has run out in the remote control. Replace the battery                                            |

## Warranty



Scan the QR code or visit our page on [dellahome.com/pages/warranty](https://dellahome.com/pages/warranty) to sign up for warranty coverage on your new DELLA appliance.



[dellahome.com/pages/warranty](https://dellahome.com/pages/warranty)

### WARRANTY COVERAGE

DELLA distributor (hereinafter "Company") warrants this product against failure due to defect in materials or workmanship under normal use and maintenance as follows: All warranty periods begin on the date of purchase. If a part fails due to defect during the applicable warranty period, Company will provide a new or remanufactured part, at Company's option, to replace the failed defective part at no charge for the part. This limited warranty is subject to all provisions, conditions, limitations and exclusions listed below.

#### STANDARD WARRANTY

- The standard warranty period is one (1) year for the entire unit and all parts, with no registration required.

#### EXTENDED WARRANTY

- The extended warranty period for Window ACs, Portable ACs, and Tower Fans is an additional 6-months period.
- In order to qualify for the free extended warranty the unit must be:
  1. Registered within one hundred (100) days of purchase.
  2. Must be with the original owner.
  3. In the same address of residence that you entered with your registration.

#### WARRANTY PARTS REPLACEMENT

- Some parts may need to be returned to Della. The limited lifetime warranty covers only parts that need to be replaced. For more information, please contact Della.

# Warranty

## LIMITED WARRANTY STATEMENT

LIMITATIONS OF WARRANTIES: ALL IMPLIED WARRANTIES AND/OR CONDITIONS (INCLUDING IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE OR PURPOSE ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS, SO THE ABOVE MAY NOT APPLY TO YOU THE EXPRESS WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER, OR OTHER PERSON, WHATSOEVER.

### THIS LIMITED WARRANTY DOES NOT COVER:


1. Labor or other costs incurred for diagnosing, repairing, removing, installing, shipping, servicing or handling of either defective parts, or replacement parts, or new units.
2. Product cleaning required prior to warranty service and repair.
3. Normal maintenance as outlined in the installation and servicing instructions or Owner's Manual, including filter cleaning and/or replacement and lubrication.
4. Failure due to faulty installation or repairs, damage, misapplication, abuse, improper servicing, lack of or insufficient maintenance, unauthorized alteration or improper operation.
5. Failure to start due to voltage conditions, improper wiring, blown fuses, open circuit breakers, or damages due to the inadequacy or interruption of electrical service.
6. Failure or damage due to floods, winds, fires, lightning, accidents, corrosive environments (rust or residue etc.) or other conditions beyond the control of the Company.
7. Damages due to chemicals (volatile organic compounds, sulfur, acids, etc.) or particulates.
8. Failure or damage of coils, piping or other parts due to corrosion, when installed in corrosive environments or within one (1) mile of seacoast.
9. Parts not supplied or designated by Company, or damages resulting from their use.
10. Products installed outside the 48 contiguous United States, except the District of Columbia and Hawaii, and Canada.
11. Electricity or fuel costs or increases in electricity or fuel costs from any reason whatsoever, including additional or unusual use of supplemental electric heat.
12. Any cost to replace, refill or dispose of refrigerant, including the cost of refrigerant.
13. Shipping damage or damage as a result of transporting the unit.
14. Accessories such as condensate pumps, line sets and so forth are not covered.
15. Any special, indirect or consequential property or commercial damage of any nature whatsoever. Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to you.
16. Consumable components, such as air filters, are not covered under parts warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. In jurisdictions where warranty benefits conditioned on registration are prohibited by law, registration is not required, and the STANDARD warranty period shown above will apply.

|            |                 |
|------------|-----------------|
| Regulatory |                 |
| ISED ID:   | 23243-WBR3      |
| Model:     | TF01-BK/TF01-WH |
| Compliance | CAN ICES-3 (B)  |

This device complies with Innovation, Science and Economic Development Canada (ISED) licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.



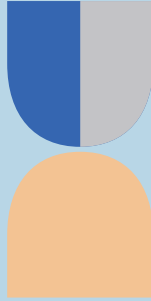

 [www.dellahome.com](http://www.dellahome.com)

 [support@dellahome.com](mailto:support@dellahome.com)

 800-863-4143


 6:00 a.m. – 4:00 p.m. PST Monday – Friday

© Della All rights reserved.

The design and specifications are subject to change without prior notice for product improvement. Any updates to the manual will be uploaded to the della website.

---

# DELLA®

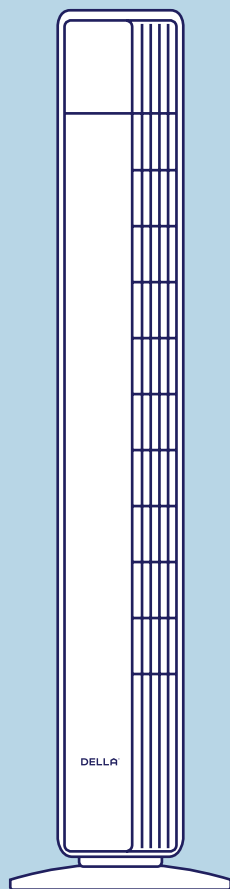

## Ventilateur colonne

Manuel d'utilisation  
Guide d'installation et d'utilisation

---





# Table des matières

04

Avertissement et sécurité

06

Noms des pièces  
Spécification du produit

07

Instructions de montage

08

Branchement d'alimentation

10

Panneau de commande  
Télécommande

13

Instruction d'utilisation

16

Entretien et maintenance

19

Dépannage

20

Garantie

## Avertissement et sécurité

- Lisez ce guide avant l'installation. Le non-respect des consignes de sécurité peut entraîner des dommages matériels, des blessures graves ou la mort.
- Veuillez conserver ce manuel.



Danger :

Indique une situation dangereuse imminente qui, si elle n'est pas évitée, entraînera la mort, des blessures graves ou des dommages matériels importants.



Avertissement :

Indique une situation POTENTIELLEMENT dangereuse qui, si elle n'est pas évitée, entraînera la mort, des blessures graves ou des dommages matériels importants.



Attention :

Indique une situation POTENTIELLEMENT dangereuse qui, si elle n'est pas évitée, entraînera des blessures mineures à modérées. Elle peut aussi servir à indiquer une pratique non sécuritaire.



Attention:

Pay additional attention to the instruction.



NE PAS :

Indique les actions et/ou pratiques interdites.

### À propos de l'installation



- Ne pas installer ni utiliser cet appareil dans la salle de bain, la buanderie ou dans des endroits susceptibles d'entrer en contact avec de l'eau.
- Ne pas altérer, changer ni modifier l'appareil.



- La base doit être correctement assemblée avant d'utiliser le ventilateur colonne.

### À propos de l'alimentation et de l'électricité



- Ne pas utiliser le ventilateur colonne si le cordon ou la fiche sont endommagés.
- Ne pliez pas, ne tirez pas et ne comprimez pas le cordon d'alimentation afin d'éviter de l'endommager. Un cordon endommagé doit être remplacé par un électricien qualifié.
- Ne faites pas passer le cordon d'alimentation sous une moquette ni le recouvrir d'un tapis d'appoint ou d'oreillers.
- N'utilisez pas le ventilateur colonne avec un dispositif de commande de vitesse à semi-conducteurs.



- Assurez-vous que la tension d'alimentation correspond à celle indiquée sur la plaque signalétique.
- Débranchez toujours le ventilateur colonne de la prise électrique lorsque vous le laissez inutilisé pendant une longue période ou avant de le nettoyer.
- Éloignez le cordon d'alimentation des zones de passage pour éviter de trébucher.



# Avertissement et sécurité

## À propos du fonctionnement



- Ne débranchez pas le ventilateur colonne de l'alimentation électrique avant de l'éteindre. Cela pourrait provoquer une étincelle et potentiellement un incendie.
- Ne montez pas sur le ventilateur colonne et n'y posez aucun objet.
- N'insérez pas vos doigts ni aucun objet dans le ventilateur d'alimentation.
- Ne pas obstruer l'entrée et la sortie d'air.
- Ne pas utiliser le ventilateur colonne avec les mains mouillées.
- Ne faites pas fonctionner le ventilateur colonne à proximité de matériaux inflammables ou combustibles.



- Utilisez le ventilateur colonne uniquement conformément aux instructions de ce livret. Ces instructions ne sont pas destinées à couvrir toutes les conditions et situations possibles. Comme pour tout appareil électroménager, Le bon sens et la prudence sont donc toujours recommandés pour l'utilisation et l'entretien.

## En cas de problème



- Si le ventilateur colonne dégage de la fumée, une odeur de brûlé ou fait un bruit inhabituel, éteignez-le. Arrêtez le ventilateur et débranchez-le de l'alimentation immédiatement. Contactez un technicien qualifié pour inspection et réparation.

## À propos de la manutention et de l'entretien




- Ne pas rincer le ventilateur colonne avec de l'eau.
- N'utilisez pas de pièces de rechange qui n'ont pas été recommandées par le fabricant, y compris les pièces faites maison, imprimées en 3D ou autres pièces de rechange du marché secondaire.



- Les réparations doivent être effectuées uniquement par un professionnel ou un technicien qualifié. Une réparation incorrecte pourrait exposer l'utilisateur à un risque de choc électrique ou à d'autres dangers.
- Avant de nettoyer le ventilateur, il faut l'éteindre et le débrancher de l'alimentation pendant au moins 5 minutes.

# DELLA®

## Noms des pièces

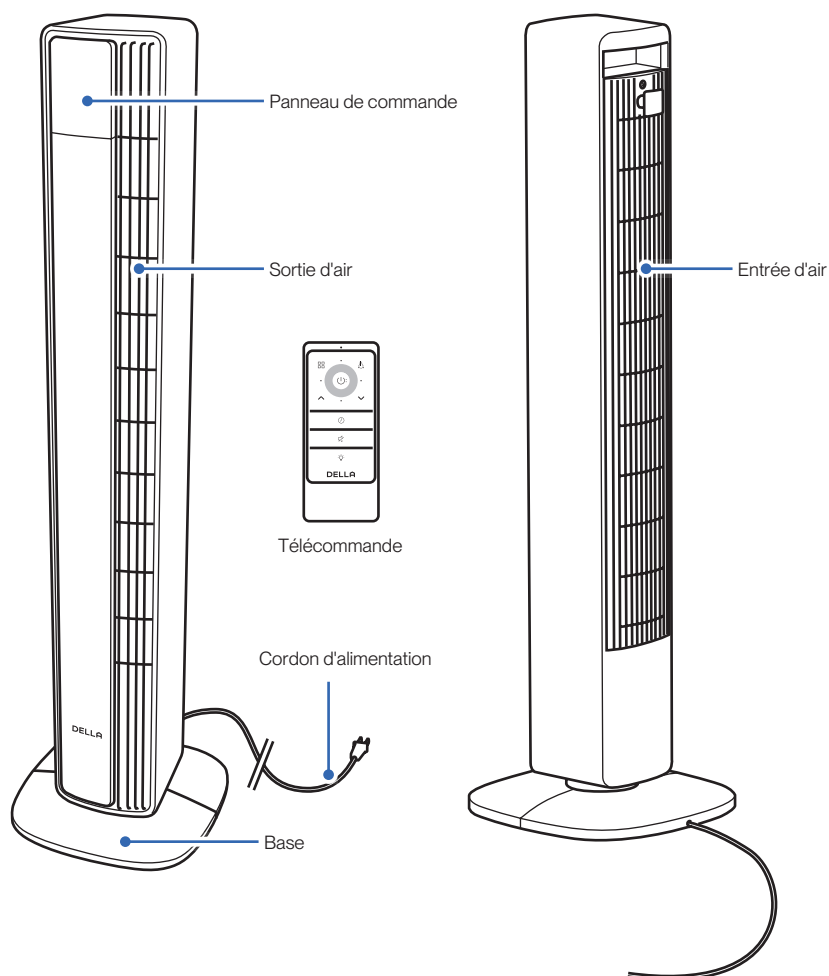


## Spécification du produit

|                       | TF01          |
|-----------------------|---------------|
| Entrée d'alimentation | 120 V / 60 Hz |
| Puissance nominale    | 45 W          |

# Instructions de montage


## Assembler la base

1

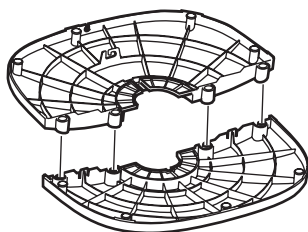


- Alignez et assemblez les plaques de base.

2

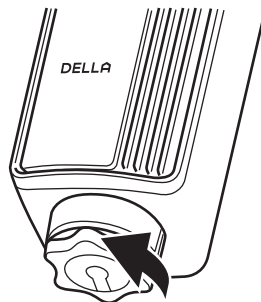


- Dévissez le capuchon de retenue situé sous le ventilateur.

3

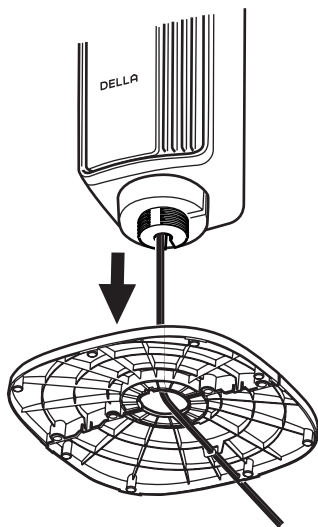

- Faites passer le cordon d'alimentation par l'ouverture centrale et clipsez-le sous la base.

4

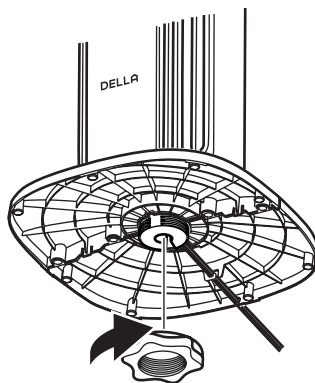

- Revissiez le capuchon de retenue sur le ventilateur colonne.




- Ne pincez pas le cordon d'alimentation entre la base et le capuchon de retenue.

## Instructions de montage

### Branchement d'alimentation


1. Insérez la fiche d'alimentation dans une prise murale.

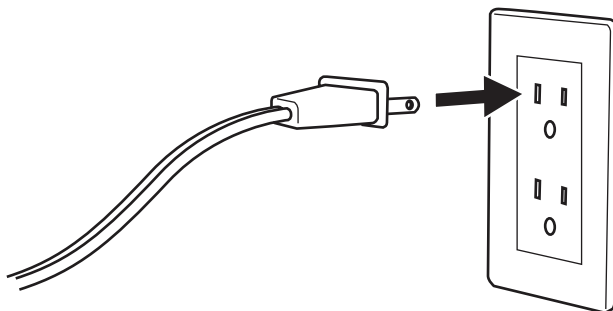

### À propos de la fiche de sécurité munie d'un fusible


Ce ventilateur colonne est équipé d'une fiche de sécurité à fusible pour protéger contre les surcharges. En cas de surcharge, le fusible Le fil fondrait et couperait l'alimentation du ventilateur colonne. Un fusible qui a sauté doit être remplacé avant de réutiliser le ventilateur colonne.

1. Débranchez la fiche d'alimentation du bloc d'alimentation.
2. Faites glisser le fusible pour l'ouvrir.
3. Retirez le fusible usagé.
4. Insérez un nouveau fusible de 5 amp 125 volt.
5. Refermez le couvercle et rebranchez la fiche d'alimentation à la prise d'alimentation.

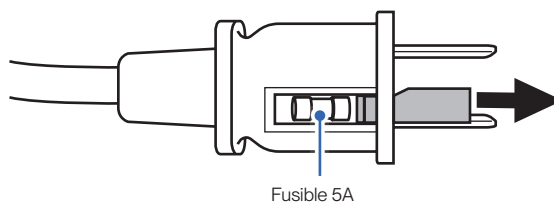

# Avant l'utilisation

## Conseils d'utilisation


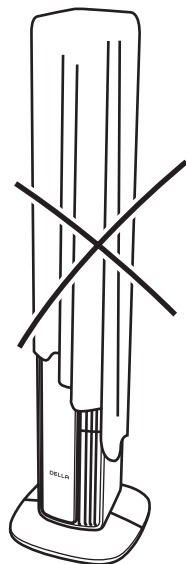


NE PAS obstruer les entrées et les sorties d'air lorsque le ventilateur colonne est en fonctionnement.



Ne pas utiliser le ventilateur colonne à proximité de matières inflammables ou combustibles.

## Panneau de commande / Télécommande

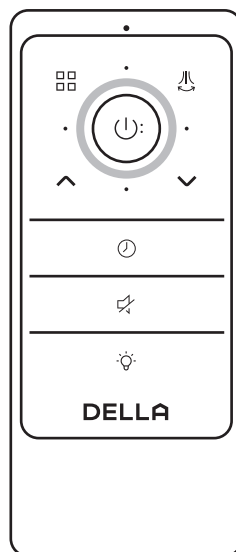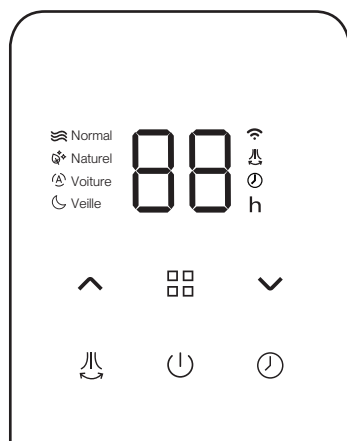

### Bouton d'augmentation

Augmenter la vitesse du ventilateur (12 niveaux)



### Bouton de mode

Sélectionnez entre les modes normal, naturel, auto et veille.



### Bouton de diminution

Réduire la vitesse du ventilateur (12 niveaux)



### Bouton d'oscillation

Activer l'oscillation du ventilateur



### Bouton Marche/Arrêt

Mettre le ventilateur colonne en marche / arrêt



### Bouton du minuteur

Activer le réglage de la minuterie Marche / Arrêt



### Bouton de mise en sourdine

Couper le son / Rétablir le son du ventilateur  
\* Disponible uniquement à l'aide de la télécommande



### Bouton d'affichage

Allumer / éteindre l'affichage du ventilateur  
\* Disponible uniquement avec la télécommande

# Télécommande

## Télécommande (Première utilisation)



1. La télécommande est fournie avec une pile préinstallée.
2. Avant d'utiliser la télécommande pour la première fois, retirez la languette isolante de la télécommande.

## Télécommande (Remplacer la pile)

1. Tenez la télécommande avec les boutons vers le bas.
2. Retirez le compartiment de la pile de la télécommande en le tirant tout en enfonçant la languette de verrouillage.
3. Insérez une pile de type pièce CR2025 dans le compartiment à piles en respectant la polarité.
4. Réinstallez le compartiment de la pile dans la télécommande.



- Le pôle positif de la pile doit être orienté vers le haut sur le compartiment de la pile.

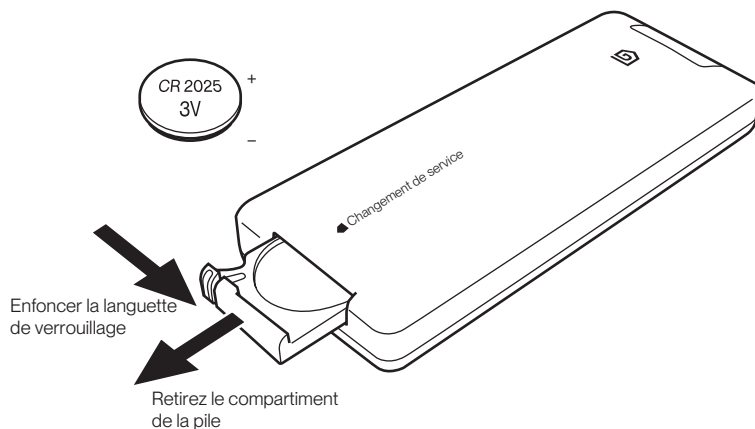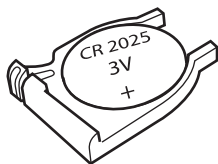

## Télécommande

Avertissement de sécurité pour la pile cylindrique

| <b>⚠ AVERTISSEMENT</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                    |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>• <b>RISQUE D'INGESTION</b> : Ce produit contient une pile bouton ou une pile de type pièce.</li><li>• <b>La MORT</b> ou des blessures graves peuvent survenir en cas d'ingestion.</li><li>• L'ingestion d'une pile bouton ou d'une pile de type pièce peut provoquer des <b>brûlures chimiques internes</b> en aussi peu que <b>2 heures</b>.</li><li>• <b>TENIR</b> les piles neuves et usagées <b>HORS DE LA PORTÉE des ENFANTS</b></li><li>• <b>Obtenez des soins médicaux immédiats</b> si l'on soupçonne qu'une pile a été avalée ou insérée dans une partie quelconque du corps.</li></ul> |  |

- Retirez et recyclez immédiatement ou éliminez les piles usagées conformément aux règlements locaux et tenez-les hors de portée des enfants. Ne jetez PAS les piles dans les ordures ménagères et ne les incinérez pas.
- Même les piles usées peuvent causer des blessures graves ou la mort.
- Appelez un centre antipoison local pour obtenir des renseignements sur le traitement.
- Type de pile compatible : CR2025, Tension : 3V.
- Les piles non rechargeables ne doivent pas être rechargées.
- Ne forcez pas la décharge ou la recharge, ne démontez pas, ne chauffez pas au-delà de la température maximale spécifiée par le fabricant et n'incinérez pas. Cela peut causer des blessures par dégagement de gaz, fuites ou explosion pouvant entraîner des brûlures chimiques.
- Assurez-vous que les piles sont installées correctement en respectant la polarité (+ et -).
- Ne mélangez pas de piles neuves et usagées, de marques différentes ou de types différents, comme des piles alcalines, carbone-zinc ou rechargeables.
- Retirez et recyclez immédiatement ou éliminez les piles des appareils qui ne seront pas utilisés pendant une période prolongée, conformément aux règlements locaux.
- Assurez-vous toujours que le compartiment à piles est complètement fermé. Si le compartiment à piles ne se ferme pas correctement, cessez d'utiliser le produit, retirez les piles et tenez-les hors de portée des enfants.
- Ne pas avaler la pile : risque de brûlures chimiques.
- Ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en seulement 2 heures et entraîner la mort.
- Gardez les piles neuves et usées hors de portée des enfants. Si le couvercle du compartiment à piles ne se ferme pas correctement, cessez d'utiliser le produit et tenez-le hors de portée des enfants. Si vous pensez que des piles ont été avalées ou insérées dans une partie du corps, obtenez immédiatement des soins médicaux.

# Instruction d'utilisation

## Fonctionnement de base

Appuyez  pour mettre en marche le ventilateur colonne.

Appuyez  sur et  pour ajuster la vitesse du ventilateur. Il y a 12 niveaux de vitesse.

Appuyez  pour activer l'oscillation du ventilateur colonne et modifier la direction du flux d'air.

## Mode de fonctionnement

Appuyez  pour sélectionner le mode de fonctionnement.



### Mode normal

Le ventilateur colonne fonctionne à une vitesse fixe.



### Mode naturel

Le ventilateur colonne fonctionne à des vitesses alternées, imitant le vent naturel.



### Mode automatique

Le ventilateur colonne ajuste automatiquement sa vitesse en fonction de la température ambiante détectée.



### Mode veille

Le ventilateur colonne réduit automatiquement sa vitesse toutes les 30 mins. Il activera également automatiquement la fonction muette.

## Fonction minuterie (Minuterie d'arrêt)

Réglez une minuterie pour mettre automatiquement le ventilateur colonne en mode OFF.

Appuyez sur  lorsque le ventilateur colonne est ON.

maintenez enfoncé  pour régler le temps avant extinction souhaité entre 0 et 24 heures.

Laisser le réglage pendant 10 secondes pour le confirmer.

Appuyez  de nouveau et réglez le minuteur sur 0 pour annuler le réglage du minuteur.

## Fonction minuterie (minuterie de démarrage)

Programmez une minuterie pour allumer automatiquement le ventilateur colonne.

Appuyez  sur lorsque le ventilateur colonne est OFF.

Appuyez longuement  pour régler le délai d'arrêt souhaité entre 0 et 24 heures.

Laisser le réglage pendant 10 secondes pour le confirmer.

Appuyez  de nouveau et réglez la minuterie à 0 pour annuler le réglage de la minuterie.

## Instruction d'utilisation

### Affichage ON/ OFF

L'affichage du ventilateur colonne s'éteindra automatiquement après 30 secondes d'inactivité.

En mode veille, l'affichage s'éteindra automatiquement après 5 secondes d'inactivité.

Appuyez sur  sur la télécommande une fois pour forcer l'affichage à ON; appuyez sur  de nouveau pour le forcer à off.

### Fonction de mise en sourdine

Appuyez sur  une fois sur la télécommande pour couper le buzzer.

Appuyez sur  à nouveau sur la télécommande pour réactiver le buzzer.

Appuyez et maintenez enfoncé  sur le panneau de commande pendant 3 secondes pour mettre le buzzer en sourdine / le réactiver.

### Verrouillage enfant

La fonction de verrouillage pour enfants désactivera toutes les commandes du panneau de commande jusqu'à son déverrouillage.

Appuyez sur  et  maintenez enfoncé pendant 3 secondes pour activer le verrouillage enfant.

"LC" will be displayed on the display.

Appuyez sur  et  maintenez de nouveau pendant 3 secondes pour désactiver le verrouillage pour enfants.

### Affichage de la température

La fonction d'affichage de la température permet au ventilateur colonne d'afficher la température ambiante sur le panneau de commande.

Appuyez sur  et  maintenez enfoncés simultanément pendant 3 secondes pour activer l'affichage de la température.

Appuyez sur  et  maintenez à nouveau simultanément pendant 3 secondes pour désactiver l'affichage de la température.

### Réinitialisation du Wi-Fi

La fonction de réinitialisation du Wi-Fi vous permet d'effacer tous les jumelages existants avec l'app et de jumeler à nouveau le ventilateur colonne à l'app de votre appareil mobile.

Appuyez et maintenez enfoncé  pendant 5 secondes pour activer la réinitialisation du Wi-Fi.

REMARQUE : La fonction Wi-Fi n'est disponible que pour le modèle TF01S.

### Réinitialisation d'usine

Lorsque le ventilateur colonne est en marche

Appuyez et maintenez enfoncé  pendant 3 secondes pour réinitialiser le ventilateur colonne aux réglages d'usine par défaut.

# Instruction d'utilisation

## Configuration du Wi-Fi (Disponible uniquement pour le TF01S)

Outre le panneau de commande et la télécommande, vous pouvez contrôler votre ventilateur colonne via l'app Della+.

1. Recherchez « Della+ » dans l'App Store d'Apple ou sur Google Play, ou scannez le code QR ci-dessous pour télécharger l'application.
2. Créez un compte dans l'app.
3. Suivez les instructions in-app pour ajouter et jumeler votre ventilateur colonne Della à l'app et complétez la configuration Wi-Fi.



### Code QR de l'appareil

Scannez ce code QR pour ajouter l'appareil à votre app Della+.



- L'application Della+ est gratuite; toutefois, des frais de données peuvent s'appliquer lors du téléchargement ou de l'utilisation de l'application.
- Della+ peut être modifié sans préavis afin d'améliorer la qualité et peut également être retiré selon les circonstances des fabricants.
- Toutes les marques, logos et noms de marque sont la propriété de leurs sociétés respectives. L'utilisation de ces noms, marques et logos n'implique pas l'approbation de leurs propriétaires. Della décline toute responsabilité quant au rendement ou à l'utilisation de ces produits.




- Consultez le tutoriel détaillé de l'application la plus à jour sur [dellahome.com/support](https://dellahome.com/support)

## Entretien et maintenance



- Avant de nettoyer le ventilateur colonne, vous devez éteindre l'appareil et le débrancher de l'alimentation électrique pendant au moins 5 minutes.
- Ne rincez jamais le ventilateur colonne à l'eau.


### Nettoyage de l'appareil

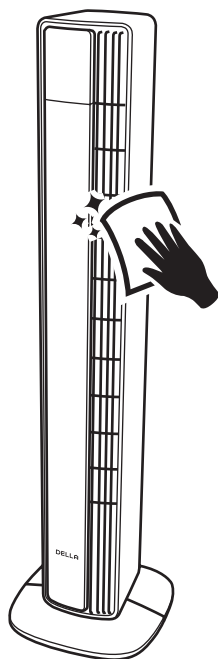


- Nettoyez le ventilateur colonne avec un chiffon doux et sec ou un chiffon légèrement humide avec un détergent neutre.
- Retirer la poussière et les débris au niveau de l'entrée et de la sortie d'air.

# Entretien et maintenance


## Nettoyage de la pale du ventilateur

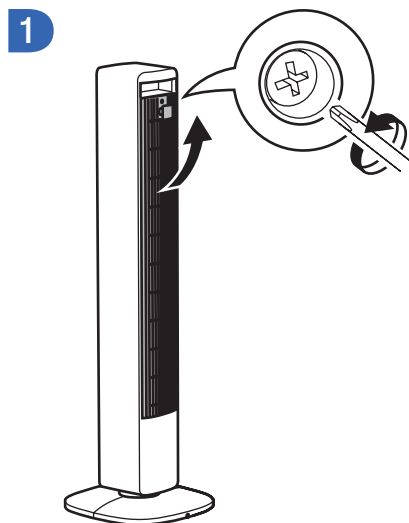


- Retirez la vis qui maintient la grille, puis tirez la grille d'entrée d'air vers le haut et vers l'extérieur pour l'extraire du ventilateur colonne.

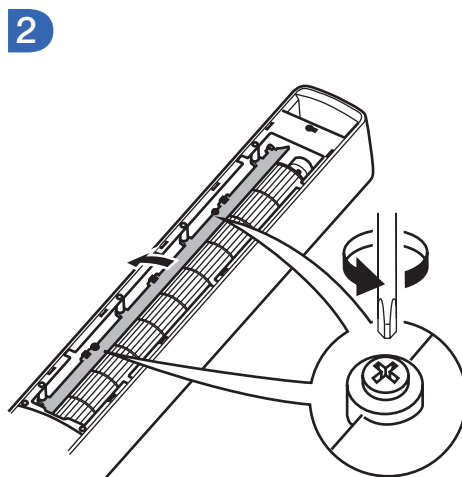

- Basculez le déflecteur d'air vers la gauche à l'intérieur du ventilateur colonne en desserrant les vis.

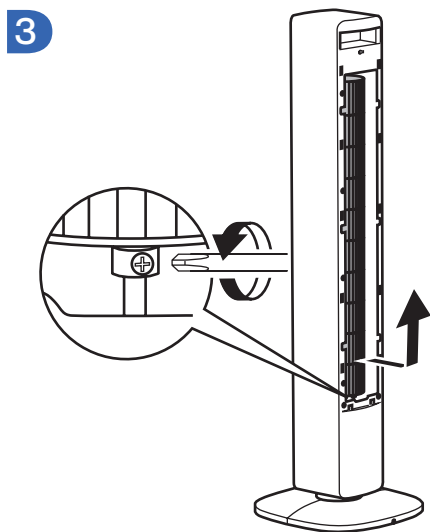

- Retirez la pale du ventilateur colonne.

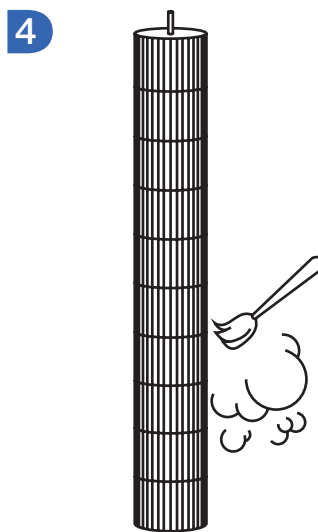

- Enlever la poussière et les débris de la pale du ventilateur.

## Entretien et maintenance

### Routine d'entretien

- Vérifiez régulièrement et retirez tout obstacle des entrées et des sorties d'air.

### Si vous prévoyez de ne pas utiliser le ventilateur colonne pendant une longue période

- Débranchez le ventilateur colonne.
- Nettoyez le ventilateur colonne.
- Entreposez le ventilateur colonne dans un endroit sec à l'intérieur.

### Utilisation du ventilateur colonne après une longue période d'inactivité

- Nettoyez le ventilateur colonne.
- Retirez tout obstacle de l'entrée et de la sortie d'air.
- Branchez le ventilateur colonne à la prise électrique et mettez-le en marche.

# Dépannage

Avant de contacter le service de réparation ou de faire jouer la garantie, veuillez consulter le guide de dépannage suivant.  
En cas de problème persistant, contactez un technicien qualifié pour le diagnostic et la réparation.



## AVERTISSEMENT

- En cas de problème persistant, arrêtez le fonctionnement et débranchez le ventilateur colonne de l'alimentation.
- N'essayez pas de réparer ou de modifier le ventilateur vous-même. Une réparation incorrecte peut provoquer un choc électrique ou des blessures.

| Problème                                                                   | Cause possible / Explication / Solution                                                                                                        |
|----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Le ventilateur colonne est hors service.                                   | Le cordon d'alimentation n'est pas branché dans une prise électrique.                                                                          |
|                                                                            | Connexion électrique défectueuse, tension de la prise incompatible ou carte de commande électronique endommagée.                               |
|                                                                            | Le ventilateur est posé sur un sol inégal et le système de protection interne s'est activé. Posez le ventilateur sur un sol plat et de niveau. |
|                                                                            | Fusible grillé sur la fiche d'alimentation. Remplacer par un fusible neuf.                                                                     |
| Le ventilateur colonne vibre et fait un bruit excessif.                    | La pale du ventilateur est trop sale. Nettoyez la pale du ventilateur.                                                                         |
|                                                                            | La base n'est pas solidement assemblée.                                                                                                        |
| Le ventilateur colonne ne répond pas aux commandes du panneau de commande. | Le panneau de commande avec le verrouillage pour enfants activé.                                                                               |
| Le ventilateur colonne ne répond pas aux commandes de la télécommande      | La télécommande est trop loin du ventilateur colonne                                                                                           |
|                                                                            | Il y a un obstacle entre la télécommande et le ventilateur colonne.                                                                            |
|                                                                            | La pile de la télécommande est déchargée. Remplacez-la.                                                                                        |

# DELLA®

## Garantie



Scannez le code QR ou rendez-vous sur [dellahome.com/pages/warranty](https://dellahome.com/pages/warranty) pour inscrire votre nouvel appareil DELLA à la garantie.




[dellahome.com/pages/warranty](https://dellahome.com/pages/warranty)

| Réglementaire |                 |
|---------------|-----------------|
| ISED ID :     | 23243-WBR3      |
| Modèle :      | TF01-BK/TF01-WH |
| Conformité    | CAN ICES-3 (B)  |

Le présent appareil est conforme aux RSS(s) exemptes de licence d'Innovation, Sciences et Développement économique Canada (ISED). Le fonctionnement est assujéti aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant provoquer un fonctionnement indésirable de l'appareil.





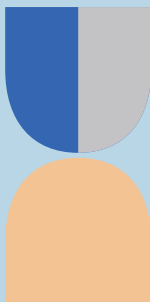

🌐 [www.dellahome.com](http://www.dellahome.com)

✉ [support@dellahome.com](mailto:support@dellahome.com)

☎ 800-863-4143

🕒 6:00 a.m. – 4:00 p.m. PST du lundi au vendredi

© Della Tous droits réservés.

La conception et les spécifications peuvent être modifiées sans préavis afin d'améliorer le produit. Toutes les mises à jour du manuel seront téléversées sur le site Web de della.

---